



EUROCARD HOLDER

SKP 48 pole/3-F(b+d+z)

To insert the card first press down the 2 yellow buttons. Then slide the Eurocard into the guide slots pushing until fully engaged. The card is now locked into position. It can be removed by pressing down on the 2 yellow buttons.

[Linkki tuotteeseen](#)

Kuvat

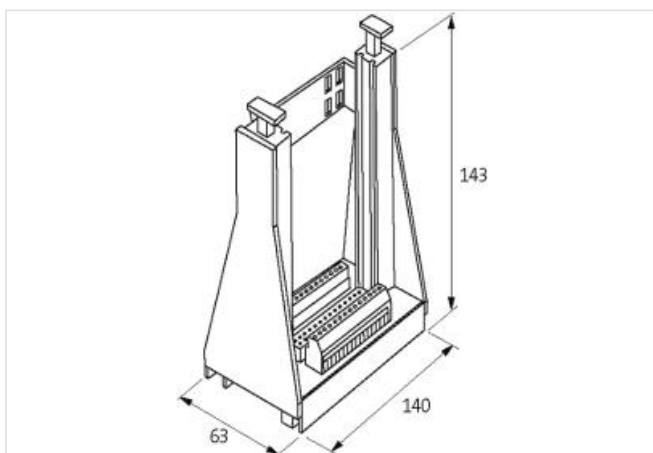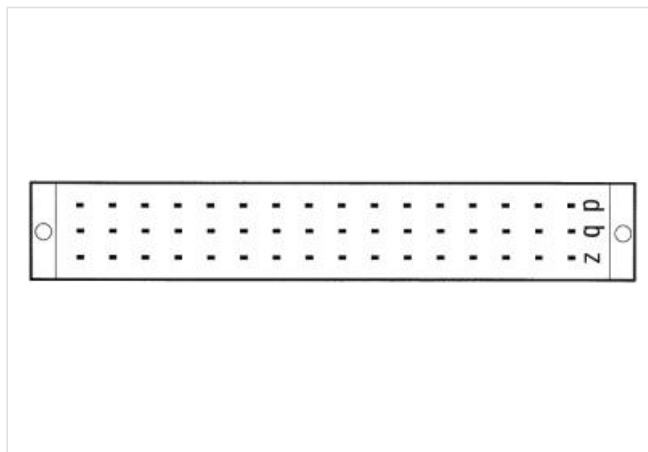

Tuote voi erota kuvassa olevasta



Kaupalliset tiedot

ECLASS-6.0	27260710
ECLASS-6.1	27260704
ECLASS-7.0	27440402
ECLASS-8.0	27440402
ECLASS-9.0	27440402
ECLASS-10.1	27440402
ECLASS-11.1	27460201
ECLASS-12.0	27460201

ETIM-5.0	EC002780
GTIN	4048879038584
Pakkauskoko	1
Tullinumero	85366990
Electrical data Supply	
Operating voltage AC	250 V
Operating current max.	4 A
Installation	
Connection cross-section solid max.	4 mm²
Device protection Electrical	
Overvoltage category (EN 60664-1)	I
Device protection Media	
Flame resistance	flame retardant
Mechanical data Material data	
Material housing	Plastic
Mechanical data Mounting data	
Mounting method	screwed, geschnappt
Suitable for mounting type	mounting rail, (EN 60715)
Height	63 mm
Width	137 mm
Depth	170 mm